




## iVIBE® Indoor Installation

***This is an indoor kit to be used where there will be no danger of strong winds or rain/water to damage the equipment.***

*The contents of the Indoor Installation Kit are illustrated below.*

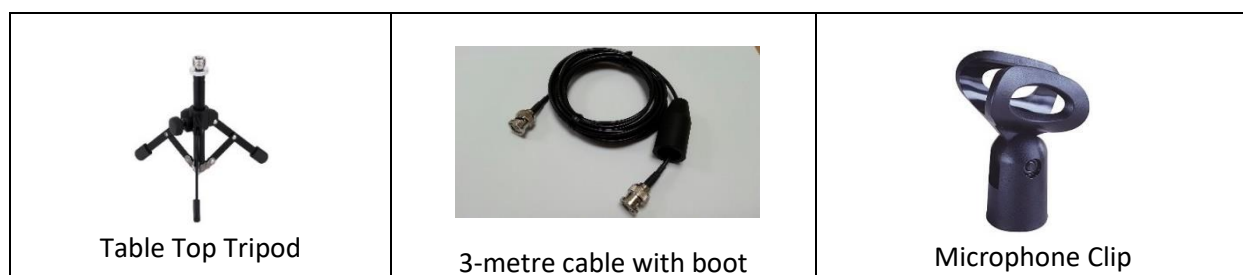

*Please contact Turnkey Instruments Ltd if any parts are missing*

1. Screw the microphone clip onto the tripod
2. The 3-metre cable supplied has a rubber boot at one end. Connect the BNC connector at that end to the microphone and push boot onto microphone body. The ACO microphone is fitted with a black rubber sleeve to grip the boot.
3. Fit microphone with rubber boot into microphone clip.
4. Position the assembly in an area where it cannot be accidentally knocked or disturbed.
5. Connect the other end of the cable to the BNC microphone input on iVIBE
6. To connect iVIBE to the Power Portal, please refer to the ***Installing the Power Portal instructions*** at [www.iVIBE.uk](http://www.iVIBE.uk)



© 2016 Turnkey, RP, Issue 4, Nov 2016

[www.turnkey.tel](http://www.turnkey.tel)

Turnkey® is a WTO registered trademark